

# amFilm® Screen Protector Installation & Use

For Glass with handles



Don't forget to watch the  
Installation Video!

**TECH**matte  
because Technology matters ...

## INSTALLATION INSTRUCTIONS

Please follow the steps below to install  
your new amFilm screen protector.

01

P  
R  
E  
P

Wash and dry hands to  
remove oils and dirt.




Clean the screen using  
provided cleaning cloth



## APPLICATION


02

Grasp the Step 1 Tab to remove  
the protective film layer. **\*\*Do not  
touch the adhesive side once the  
protective film layer is removed.**

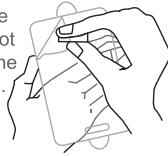


03

Ensure that the adhesive side of the screen protector is  
facing down. With your fingertips, carefully hold the two  
tabs on either end of the screen protector.



04

Using the tabs, carefully align  
the screen protector with the  
tablet. Now, slowly lower the  
screen protector onto your  
device.

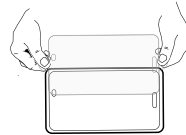

05



Once the screen protector is in place,  
lightly press the center of the screen  
protector and then gently slide your  
fingertip across the screen, allowing the  
screen protector to adhere itself to the  
device


06

Eliminate any bubbles by using  
the included Squeeze Card to  
push bubbles out.



07

Finally, hold one of the two  
tabs and slowly peel back  
the second protective plastic  
film.



[www.techmatte.com/install](http://www.techmatte.com/install)



Visit the link or scan  
the Barcode to view  
the video.



### HELPFUL TIP FOR A BUBBLE-FREE INSTALLATION

Apply Screen Protector in the bathroom after  
running hot water for a few minutes. The steamy  
environment will reduce the dust in the air, which  
can cause unwanted bubbles.

For More useful methods, tips and installation  
videos, please visit [www.techmatte.com/install](http://www.techmatte.com/install)