



## Installation Guide


Scan Me




or visit

[www.TechMatte.com/install/GLS03](http://www.TechMatte.com/install/GLS03)

- 1** Begin by cleaning the screen with the Wet Wipes and the Microfiber Cleaning Cloth.

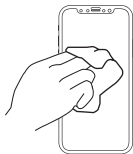


- 2** Remove any case from the phone. Place the Easy Installation Tray on the phone.

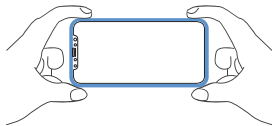


- 3** Peel off the first mask film from the Screen Protector, exposing the adhesive surface.




- 4** Using the Easy Installation Tray as a guide, line up the bottom of the protector with the bottom of the Installation Tray. Slowly place the protector onto the phone.

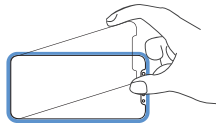

- 5** Using your index finger, swipe down the middle of the screen protector so that the protector will adhere itself to your phone.

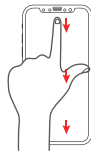

- 6** Remove the Installation Tray, and squeeze out any bubbles from under the screen protector. Press around the edges to ensure the protector is sealed.

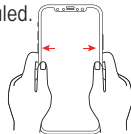



### Attention! Halo Effect?

A small percentage of iPhones have a more curved screen than others. Users may experience an issue called the **Halo Effect** on the edges with glass screen protectors. If you are one of the owners of the unique phones, we have a special Halo Free version for you.

#### STEP 1:

Use the current screen protector for temporary protection.

#### STEP 2:

Email with an image of your screen protector with the Halo.

#### STEP 3:

Wait 3-5 days for the delivery of our Halo Free Screen Protector.

## Damaged or Arrived Broken?

Try our 1-Click Warranty Claim

Go to [TechMatte.com/WarrantyClaim](https://TechMatte.com/WarrantyClaim)

OR

Scan the QR Code Below.



## Want More Coverage?

Unlock our Lifetime Warranty

Go to [TechMatte.com/Register](https://TechMatte.com/Register)

OR

Scan the QR Code Below.



**24/7 Customer Support**



[support@techmatte.com](mailto:support@techmatte.com)

[www.techmatte.com](https://www.techmatte.com)

STAY CONNECTED



@TechMatte



@TechMatte



/TechMatte