



**1** Adhere the mounting pad to a sturdy surface, and place your phone on top of it. This will help keep the phone in place during installation.

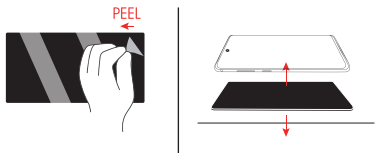


**2** Begin by cleaning the screen with the Wet/Dry Wipes and the Dust Removal Stickers.


*\*Please watch the installation video carefully before installing the screen protector.*

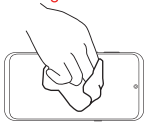


**3** Fully insert the alignment tool into your phone's USB-C port, making sure it is flush against the bottom of your phone.

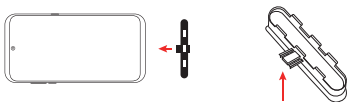


**4** Remove the Tab 1 film carefully, and place the three hole punch part of the screen protector onto the alignment tool. Please make sure that the Tab 3 film, which has the text printed on it is face up, then affix the alignment tool cap to the bottom piece to keep the protector in place.

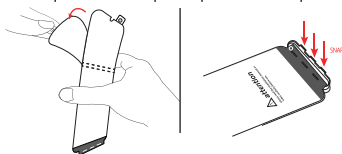


**5** Carefully align the protector to your phone's screen, and once in place, swipe on the middle adhesive strip.

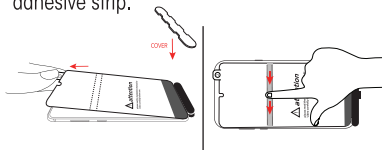


**6** Lift the loose end with tab 2, starting from the middle of the protector at the adhesive strip. Use the squeegee to push the tab 2 film out from underneath (effectively rolling and adhering the top half of the screen protector into place.)

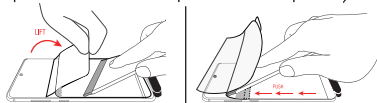


**7** Remove the cover of the alignment tool and then remove the bottom half of the tool from the phone's USB-C port.

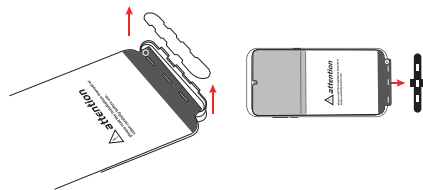

**8** Repeat Step 6 for the bottom half of the screen protector.

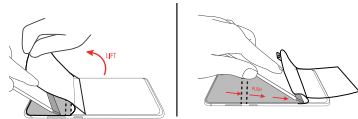

**9** Push with thumbs along the protector to seal it in place and remove the top mask film.

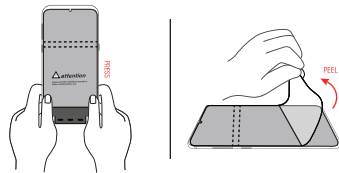

## Damaged or Arrived Broken?

Try our 1-Click Warranty Claim

Go to [TechMatte.com/WarrantyClaim](https://TechMatte.com/WarrantyClaim)

OR

Scan the QR Code Below.



## Want More Coverage?

Unlock our Lifetime Warranty

Go to [TechMatte.com/Register](https://TechMatte.com/Register)

OR



TECHmatte

**24/7 Customer Support**



support@techmatte.com

[www.techmatte.com](https://www.techmatte.com)

STAY CONNECTED



@TechMatte



@TechMatte



/TechMatte

amFilm®

Installation Guide

Scan Me



or visit

[www.TechMatte.com/install/EL](https://www.TechMatte.com/install/EL)