



24/7 Customer Support



www.techmatte.com

STAY CONNECTED



Q & A

Q: I got an air bubble during installation. What now?

A: If the Screen Protector is already on the phone with the adhesive spread, you will need a replacement Protector. Cure the Protector with the UV light, then remove it and discard. Please send us an email for a free replacement.

Q: The Gel didn't spread evenly during application, and it's been more than 3 minutes. What do I do?

A: Tilt the phone in the direction that the Gel needs to go. DO NOT TOUCH THE PROTECTOR.

Q: How do I reset my fingerprint after installing the screen protector?

A: Navigate: Settings > Lock screen > Looking for something else? > Fingerprints > Add Fingerprint

Q: How do I remove the Screen Protector?

A: Once the UV gel is cured, it becomes a solid adhesive gel. You can peel the screen protector off, starting with one corner and carefully lifting up.

Q: The adhesive came out of the tube, but a small amount splashed into its own puddle.

A: Tilt the phone so the larger pool will absorb the smaller one, and then tilt so the adhesive will return to center. Or, use the adhesive tube to drag the small puddle into the larger one.

Installation Guide

amFilm®

amFilm

ULTRA

Damaged or Arrived Broken?

Try our 1-Click Warranty Claim

Go to TechMatte.com/WarrantyClaim



Scan the QR Code Below.



Want More Coverage?

Unlock our Lifetime Warranty

Go to TechMatte.com/Register




Watch Demo




www.TechMatte.com/install/UV2


- 1** Turn off your device and apply the leveling pads to the back of your device, at the bottom. This will keep the phone level on the table.

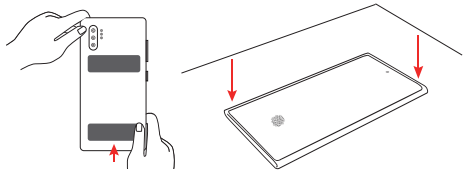


- 2** Place the application tray over your device. Please make sure that the tray is oriented correctly by the word "TOP" that is etched into the plastic.

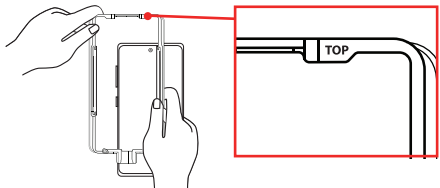


- 3** Peel one of the Speaker Stickers from its film and apply it on top of the speaker on your device, through the open cut in the tray. This prevents adhesive gel from entering your device's speaker.

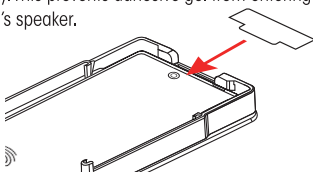

- 4** Press down on the Speaker Protecting Tab so it adheres to your device's speaker.

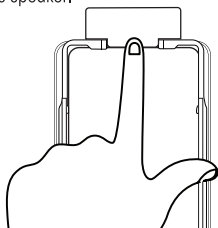


- 5** Find a flat surface for the installation. Use the level (the bubble will be centered when level) to verify the surface is completely flat. Clean your device's screen before proceeding.

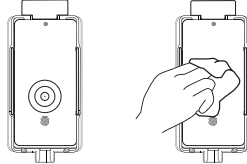


- 6** Insert the plastic pin in the designated slot at bottom of the tray.




- 7** The application tray will be pre-installed with absorption pads to soak up any excess adhesive. Please make sure they are securely installed on either side of the tray. Clean your device's screen once more.




- 8** Make sure your device's screen is still dust-free. Then remove the red cap of the Adhesive Tube and hold it directly over the MIDDLE of the device, with the open end facing downwards. The adhesive will NOT seep out at this point.

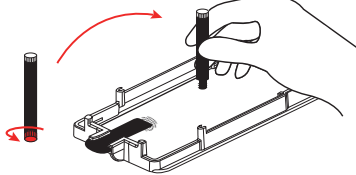


- 9** Unscrew the other end of the tube to release the adhesive. Make sure the adhesive is positioned above the middle of the device.

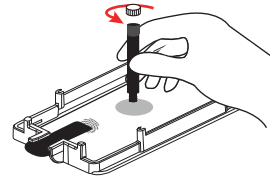


- 10** Remove the mask film from the screen protector, and place the top edge of the protector on the phone, allowing the bottom edge to rest on the plastic pin.

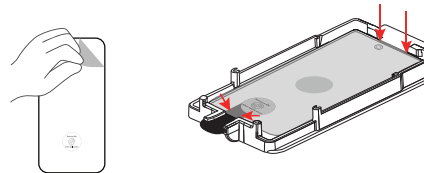


- 11** Slowly pull the pin from Step 6, so the protector lowers and gradually touches the adhesive. Once the screen protector makes contact with the adhesive, it will start to spread. At this point, quickly finish pulling the pin out.

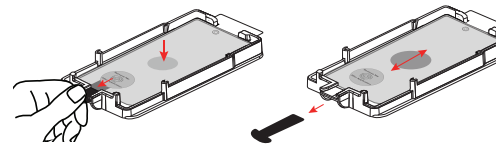


- 12** Place the metal cylinder on the Fingerprint Scanner. The location of the scanner is indicated by the sticker on the screen protector. Allow the adhesive to spread automatically. This could take 2-3 minutes. DO NOT PRESS ON THE SCREEN PROTECTOR OR THE CYLINDER.

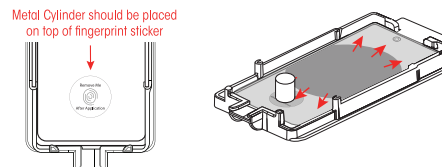


- 13** Plug in the UV Light, prop its legs outwards, and suspend it over the phone for 15 seconds on each section (top, middle, and bottom.)

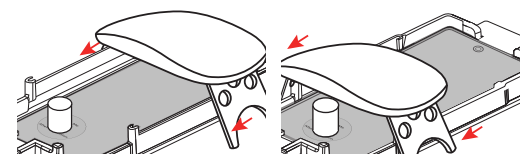

- 14** Remove the cylinder from your device, and use the UV Light to cure the area of the screen that had the cylinder on top of it for 30 additional seconds.

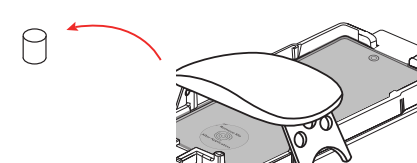

- 15** Repeat the process from Step 13, for intervals of 60 seconds each.

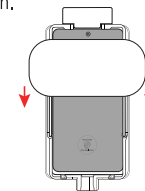

- 16** If you registered your fingerprint before applying this screen protector, the fingerprint on file with your phone may no longer work. We recommend re-scanning each finger TWICE to ensure optimal accuracy.

