




- 1** Begin by cleaning the screen with the Wet/Dry Wipes and the Dust Removal Stickers.

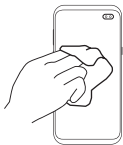

- 2** Adhere the mounting pad to a sturdy surface, and place your phone on top of it. This will help keep the phone in place during installation.

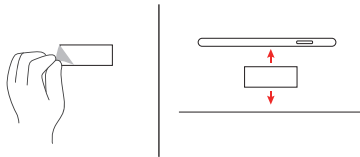


- 3** Fully insert the alignment tool into your phone's USB-C port, making sure it is flush against the bottom of your phone.

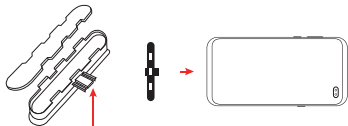


\*Use the side of the applicator tool with the wider protrusion. This is labeled "USBC"


- 4** Place the three hole punch part of the screen protector onto the alignment guide, and affix the alignment tool cap to keep the protector in place.

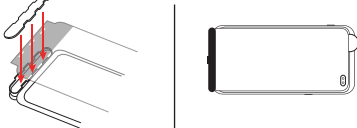


- 5** Lift the loose end of the screen protector and remove the initial mask film, exposing the strip of adhesive in the middle. Set the protector back down and press the adhesive strip to the phone.

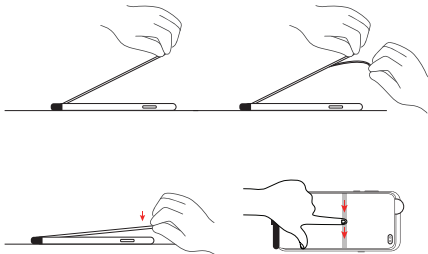


- 6** Lift the loose end of the screen protector again and jut the second mask film outward from underneath. Use the squeegee to roll the mask film out, while sealing the protector to the phone, similar to applying a bandaid.

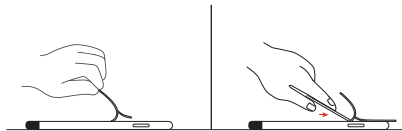

- 7** Remove screen protector from applicator tool and repeat Step 6 on the other side of the phone.

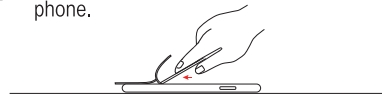

- 8** Push with thumbs along the protector to seal it in place and remove the top mask film.

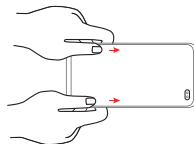

## Damaged or Arrived Broken?

Try our 1-Click Warranty Claim

Go to [TechMatte.com/WarrantyClaim](https://TechMatte.com/WarrantyClaim)

OR

Scan the QR Code Below.



## Want More Coverage?

Unlock our Lifetime Warranty

Go to [TechMatte.com/Register](https://TechMatte.com/Register)

OR



### 24/7 Customer Support



support@techmatte.com

[www.techmatte.com](https://www.techmatte.com)

### STAY CONNECTED



@TechMatte



@TechMatte



/TechMatte

amFilm®

## Installation Guide

Scan Me



or visit

[www.TechMatte.com/install/EL](https://www.TechMatte.com/install/EL)