

amFilm[®]

Installation Guide

www.techmatte.com

STAY CONNECTED



@TechMatte



@TechMatte




/TechMatte

- 1** Clean the camera area on the back of your phone with the wet wipes and the microfiber cloth.



- 2** Pull the Step 1 Tab to remove the protective film layer. DO NOT TOUCH THE ADHESIVE SIDE once the protective film layer is removed.

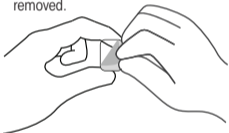

- 3** Align the protector to your device's camera and apply firm pressure.

