



- 1** Make sure your hands are clean before starting the application process.




- 2** Clean the device's screen with the wet wipe and cleaning cloth.

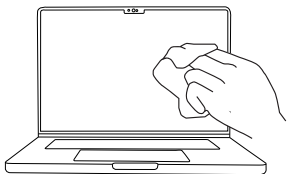


- 3** Peel off the mask film labelled "Step 1" from the screen protector.

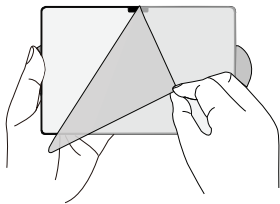

- 4** Align the screen protector to your device, making sure the adhesive side is facing the screen and the cutout is aligned with the camera.

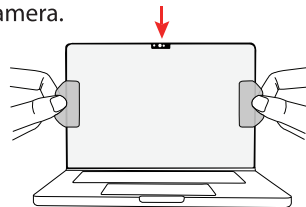

- 5** Press firmly around all edges to seal the screen protector into place.

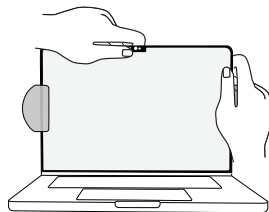

- 6** Remove the remaining mask film by peeling the handle and pulling it off.



Damaged or Arrived Broken?

Try our 1-Click Warranty Claim

Go to TechMatte.com/WarrantyClaim

OR

Scan the QR Code Below.



Want More Coverage?

Unlock our Lifetime Warranty

Go to TechMatte.com/Register

OR


Scan the QR Code Below.



amFilm®

Installation Guide

Scan Me

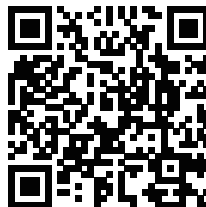

or visit

www.techmatte.com/install/mac