


- 1** Wash and dry your hands thoroughly - this helps to remove any oils and dirt.




- 2** Clean your device's screen - use the included cleaning wipe to clean the entire screen. Then use the provided microfiber cleaning cloth to dry the screen.




- 3** Use the dust removal sticker to pick any dust particles still left behind. DO NOT TOUCH THE SCREEN once it has been cleaned.

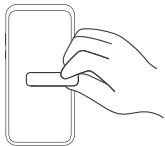


- 4** Pull the Step 1 Tab to remove the protective film layer. DO NOT TOUCH THE ADHESIVE SIDE once the protective film layer is removed.

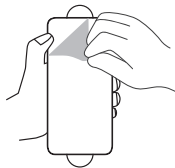


- 5** Ensure that the adhesive side of the screen protector is facing down. Carefully hold the two tabs on either end of the screen protector.

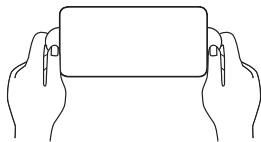


- 6** Align the screen protector with the device. This placement must be precise. Using the tabs, slowly lower the glass protector onto your device.




- 7** Once the glass is in place, gently slide your fingertip across the screen from top to bottom.



- 8** Eliminate any bubbles by firmly pushing bubbles off towards the edges of the glass. Alternatively, lift the corner nearest the bubbles. Set the corner back down and the bubbles should be gone.

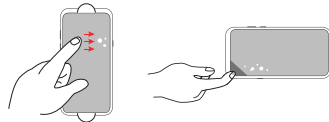

- 9** Hold one of the two tabs and slowly peel back the second protective plastic film.

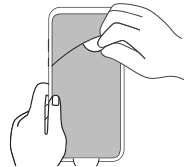

## Damaged or Arrived Broken?

Try our 1-Click Warranty Claim

Go to [TechMatte.com/WarrantyClaim](https://TechMatte.com/WarrantyClaim)

OR

Scan the QR Code Below.



## Want More Coverage?

Unlock our Lifetime Warranty

Go to [TechMatte.com/Register](https://TechMatte.com/Register)

OR



**24/7 Customer Support**



support@techmatte.com

[www.techmatte.com](https://www.techmatte.com)

STAY CONNECTED



@TechMatte



@TechMatte



/TechMatte

amFilm®

Installation Guide

Scan Me



or visit

[www.TechMatte.com/install/GLS2](https://www.TechMatte.com/install/GLS2)