




- 1** Turn off your device and apply the leveling pad to the back of your phone, with the open cutout over the camera.

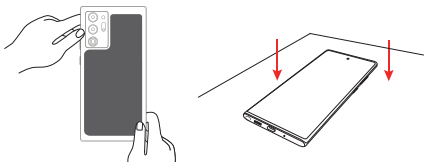


- 2** Clean the screen with the wet & dry wipes and the dust removal stickers.

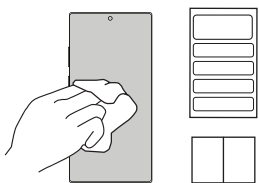


- 3** Place the application tray on your phone, with the bubble level on the bottom (at the charging port) of your phone.

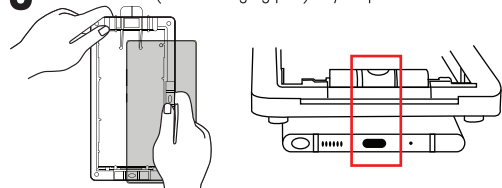


- 4** Make sure the phone is 100% level with the levels on the application tray. The bubbles will be centered when the tray is flat.

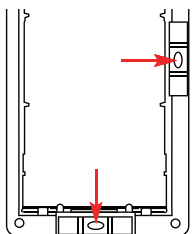


- 5** Place absorption pads in the slots of the tray on all four sides.

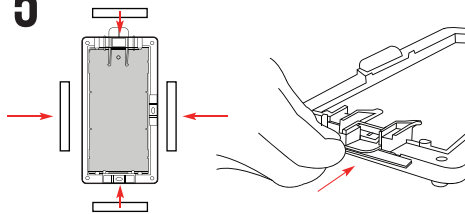


- 6** Unscrew the yellow cap of the adhesive tube. Unscrewing the black cap will release the adhesive in the tube. Drip all the adhesive into the MIDDLE of the screen. Tilt the phone if needed to get the adhesive in the middle.

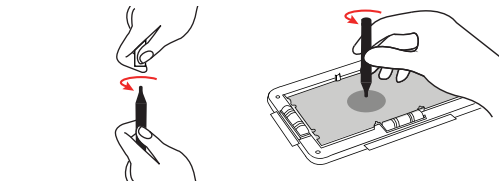


- 7** Peel off the mask film of the screen protector, and set it within the tray. The Screen Protector will be resting on the pull pin at the TOP of the phone.

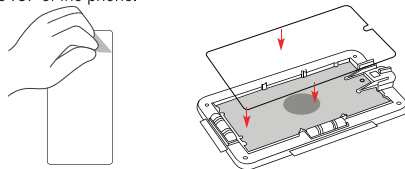


- 8** Slowly retract the pull pin at the TOP of the phone, until the screen protector comes into contact with the adhesive puddle. Then remove the pin until the screen protector lays flat and the adhesive spreads to the top and bottom.

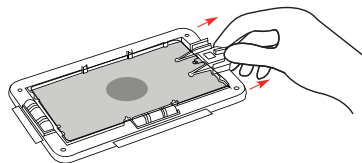


- 9** While the adhesive is spreading, DO NOT TOUCH the screen protector during this time – let the adhesive spread on its own.

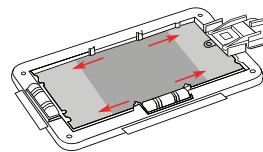


- 10** Plug in the UV light using a USB-C cable. This is not included in the package. You can use the original charging cable that came with your device.

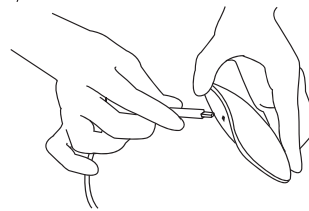


- 11** Prop the UV light up on its legs and turn it on. Place the UV Light over the phone and move it side to side several times (roughly 90 seconds).

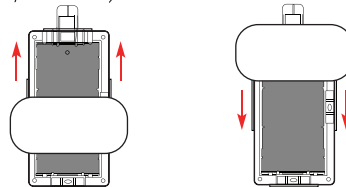


- 12** Remove the absorption pads and the installation tray.

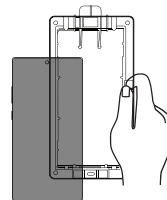

- 13** Use the UV light again a few more times. The more passes with the UV light, the better the screen protector will be affixed.

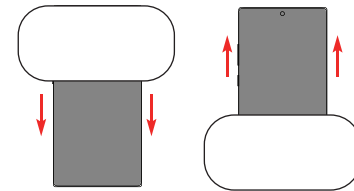

- 14** Clean the screen with the microfiber cloth again, and wipe off any excess adhesive or new dust specs.

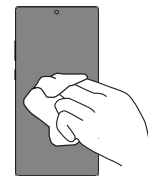

- 15** Rescan your fingerprints into the phone system if needed, and enjoy the screen protector!



- 16** If you have any questions or had encountered an issue during this process, we're here to help. Please send us an email at:



support@techmatte.com



24/7 Customer Support



www.techmatte.com

STAY CONNECTED



Q&A

Q: I got an air bubble during installation. What now?

A: If the Screen Protector is already on the phone with the adhesive spread, you will need a replacement Protector. Cure the Protector with the UV light, then remove it and discard. Please send us an email for a free replacement.

Q: The Gel didn't spread evenly during application, and it's been more than 3 minutes. What do I do?

A: Tilt the phone in the direction that the Gel needs to go. DO NOT TOUCH THE PROTECTOR.

Q: How do I reset my fingerprint after installing the screen protector?

A: Navigate: Settings > Lock screen > Looking for something else? > Fingerprints > Add Fingerprint

Q: How do I remove the Screen Protector?

A: Once the UV gel is cured, it becomes a solid adhesive gel. You can peel the screen protector off, starting with one corner and carefully lifting up.

Q: The adhesive came out of the tube, but a small amount splashed into its own puddle.

A: Tilt the phone so the larger pool will absorb the smaller one, and then tilt so the adhesive will return to center. Or, use the adhesive tube to drag the small puddle into the larger one.

Installation Guide

Damaged or Arrived Broken?

Try our **1-Click Warranty Claim**

Go to TechMatte.com/WarrantyClaim



Scan the QR Code Below.



Want More Coverage?

Unlock our **Lifetime Warranty**

Go to TechMatte.com/Register



ULTRA

Watch Demo



www.TechMatte.com/install/UV