




- 1** Begin by placing your device on the included mat. This will ensure that the phone doesn't move during the installation process.

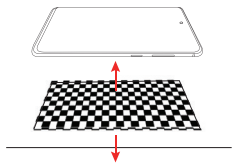

- 2** Clean the screen with the Wet Wipe and the Dust Removal Stickers.

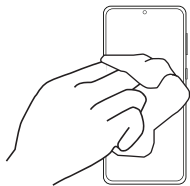

- 3** Place the application tray over your device, and firmly press it into place.

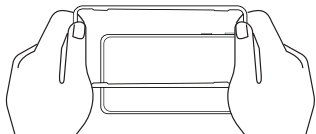

- 4** Peel the first mask film from the screen protector. This is labelled "Step 1" Tab.



- 5** Align the holes in the tab on the bottom of the protector to the plastic pegs on the application tray. These will help keep the protector in place. Repeat Step 5 for the other end of the phone.




- 6** Use the squeegee to apply the screen protector by FIRMLY pushing from the middle to one end and then from the middle to the other end.


*\*Please make sure that no bubbles appear under the protector during this process. If bubbles occur, use the squeegee to push them towards the edges and out from under the protector.*



- 7** Remove the second mask film from the top of the newly applied screen protector. Then, remove the application tray. Now the application process is complete.

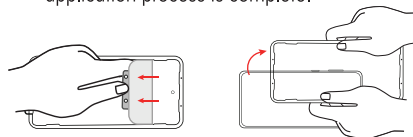

- 8** If bubbles remain around the edges of the screen protector, use the squeegee again to push the bubbles out from under the edges of the glass.

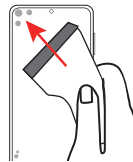

- 9** Rescan your fingerprints into the phone system if needed, and enjoy the screen protector!



## Damaged or Arrived Broken?

Try our 1-Click Warranty Claim

Go to [TechMatte.com/WarrantyClaim](https://TechMatte.com/WarrantyClaim)

OR

Scan the QR Code Below.



## Want More Coverage?

Unlock our Lifetime Warranty

Go to [TechMatte.com/Register](https://TechMatte.com/Register)

OR



**24/7 Customer Support**



[support@techmatte.com](mailto:support@techmatte.com)

[www.techmatte.com](https://www.techmatte.com)

STAY CONNECTED



@TechMatte



@TechMatte



/TechMatte



@tech.matte

amFilm<sup>®</sup>

## Installation Guide

Scan Me



or visit

[www.techmatte.com/install/hybrid](https://www.techmatte.com/install/hybrid)