amFilm

Installation Guide

TECHmatte

Scan Me

or visit

www.TechMatte.com/install/hinge

24/7 Customer Support

support@techmatte.com

www.techmatte.com

STAY CONNECTED

@TechMatte | @TechMatte | /TechMatte | @tech.matte

1 Apply the two hinge stickers onto the back of your device.Align the screen protector on your screen with the step 1 label face down.

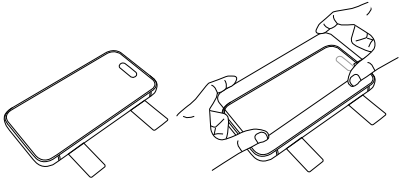

2 Adjust the hinge stickers to the screen protector while it rest on your device. Place the other hinge sticker to the other end of the screen protector. Flip the screen protector over like a book whilst holding the hinge sticker.

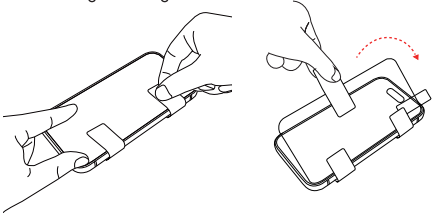

3 Clean the screen with the wet tissue, dust-removal cloth and dust-removal sticker.

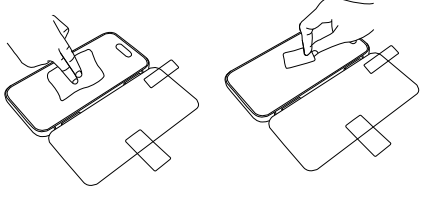

4 Peel off the mask film using the step 1 label. Flip the screen protector back onto your device by using the lifting sticker. Make sure it is lined up correctly.

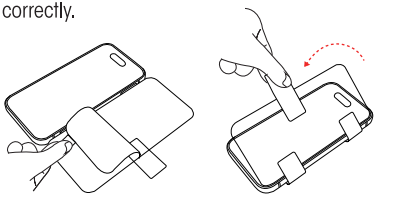

5 Before completely releasing the screen protector onto the screen, gently swipe the screen protector in middle from the hinge end to other end. This will help the screen protector adhere to the screen.

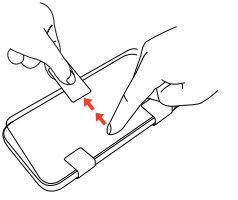
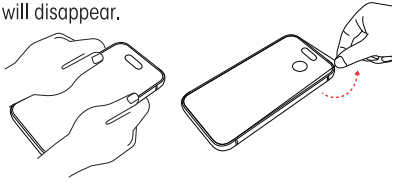
6 Gently press the screen protector and remove all bubbles, You may also remove all the stickers at this time.If there are bubbles remained, gently raise a corner and put it down, the bubbles will disappear.